





Place parts together on a firm flat surface as shown in figure 2. —>  
 Tap parts into place securely in the first end cap using a scrap piece of wood to protect the ends from the hammer.

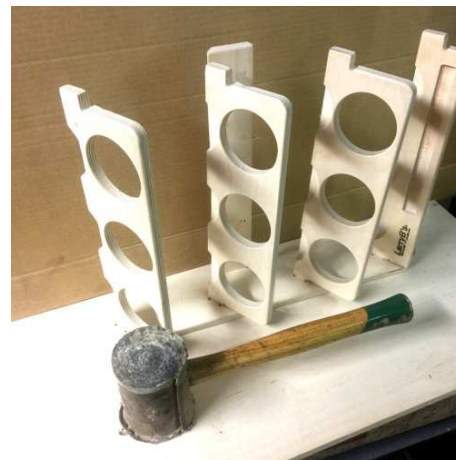

Place second end cap as shown in figure 3.



Tap slightly enough to start the first shelf, working your way down making each part line up and start into it's hole as you go. Notice that the back mounting strap has different angles on each bevel. As shown in figure 4 below. It can only go together one way without damaging the joint.

Once all parts are lined up and started, using scrap wood to protect your shelf from the hammer, firmly pound everything into place moving around to seat all joints completely and evenly. You are done!

